

How To Use : Pela 650 & PELA Pro 14 Oil Extractors



Step 1

Pre-run engine for about 5 minutes to warm the oil and to allow the sludge to mix and suspend in the oil. Remove the dipstick.



Step 2

Select and insert the appropriate diameter extraction tube into the dipstick pipe until it touches the bottom of the oil pan. Connect the main tube to the top of the unit and to the extraction tube.



Step 3

Pump the handle 4 to 15 times in a row to start the vacuum. The unit will extract the oil automatically. Continuous pumping is not required.



Step 4

After all the oil has been extracted, press the release valve located at the top of the unit for 5 seconds. Remove the main tube. When pouring the oil into a container, hold the pump as in the photo and pour gently. Bring the used oil to a recycling depot.