




Blue Performance bunknet keeps you from rolling out of bed in rough weather.


1 Remove the mattress.




2 Place the bunknet with silver side up. Check if final height of the bunknet is ok.

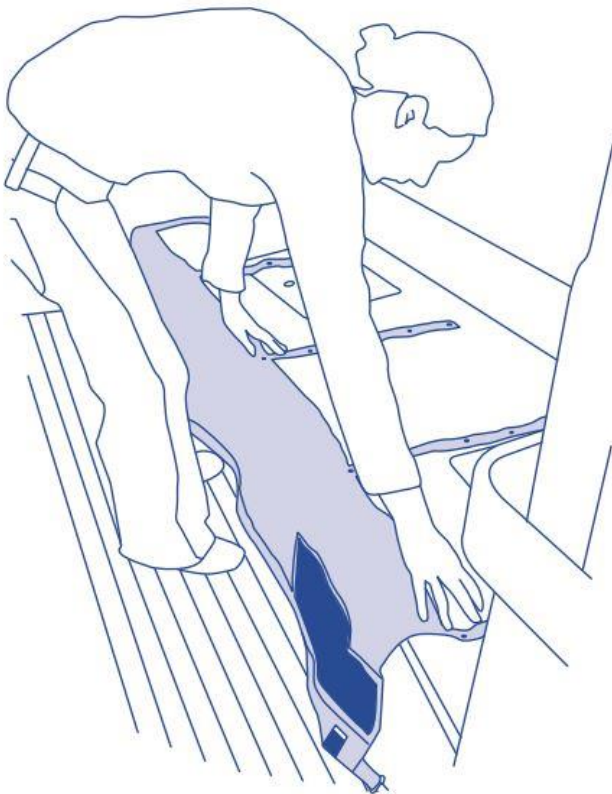


3 Choose a hole in the webbing closest to the front edge of the seat. Fix 5 x screw through the webbing

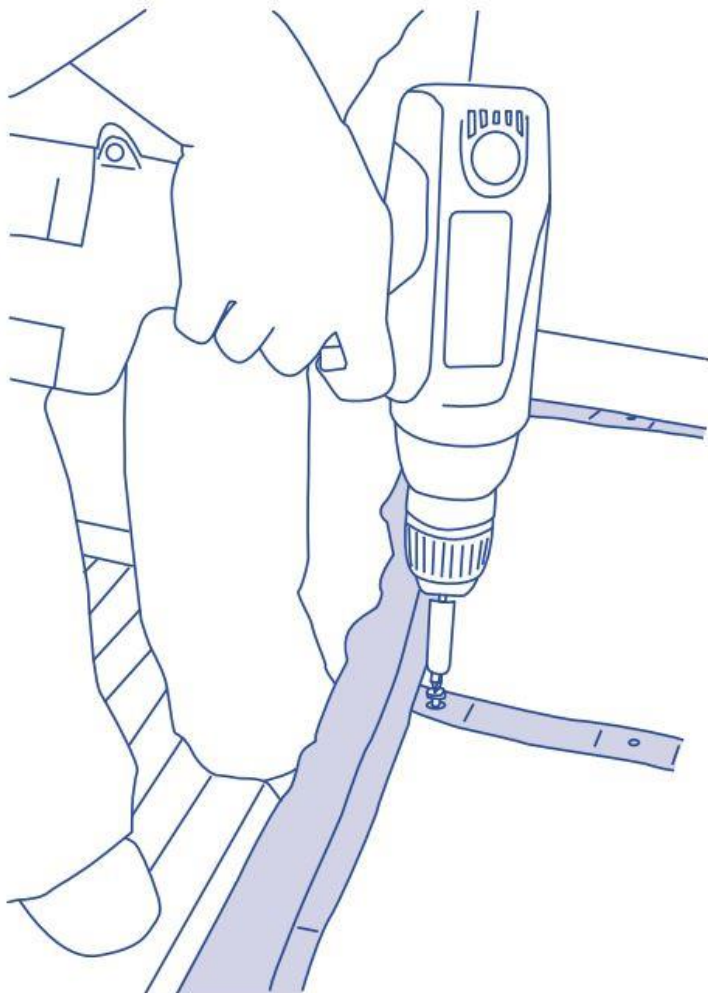

4 Cut the remainder of the webbing in between the stitching and dispose.

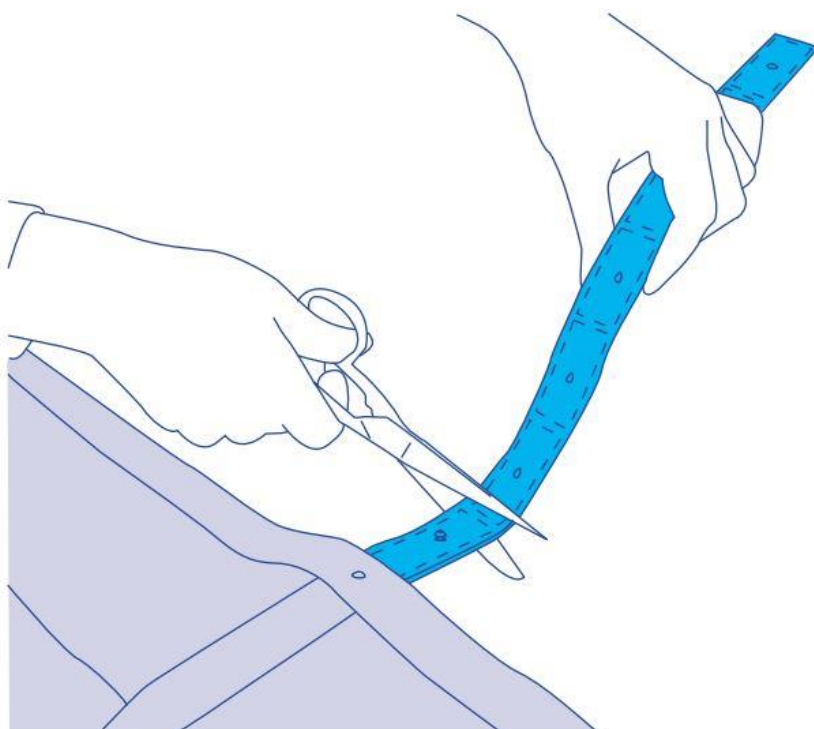

5 Make a connection from a fixed point on the boat to the D-rings fitted on the ends of the bunknet.

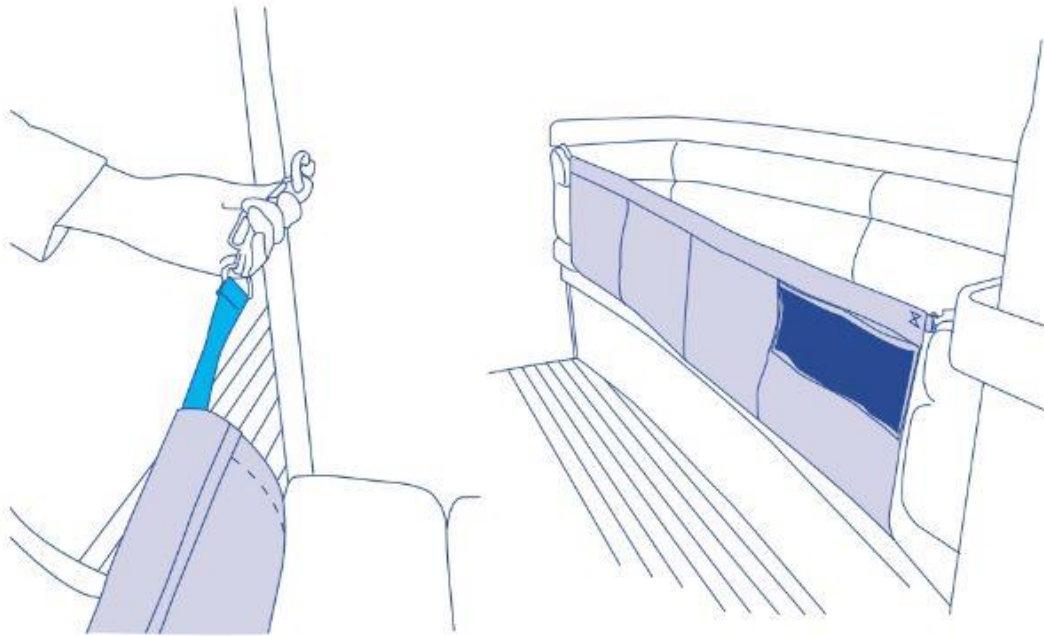

6 Stow away underneath the mattress when not used.

